




KAT Airline 800

Blocking in Airline tracks. Elastic force for sturdiness in box vehicles.




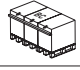




► Length



1 - Length	2 - Product identification sticker	Order code
BC 800: Adjustment lengths from min. 650 to max. 2510 mm.	 	511300 KAT Airline 800 Internal dimension xxxx mm
	BC 800	

► Customized product identification sticker

✓	2 - Product identification sticker	Order code
  	BC = 800 daN    	
Customized product label with your logo		Custom sticker
Product label		allsafe sticker

► Sample order code

KAT Airline 800	-	2480	-	allsafe sticker
-----------------	---	------	---	-----------------

